




JALCO SNOWGUARD INSTALLATION INSTRUCTIONS

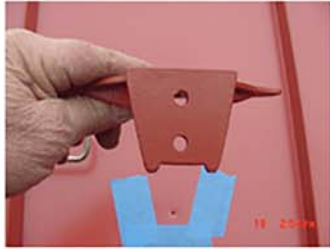

Flat Metal Roofs:
Use stainless steel screws and reinforce with adhesive sealant such as Surebond or Xtrabond.

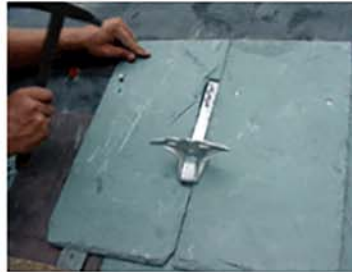

Slate Roofs:
Use stainless steel screws. Notch next slate for tight fit. 36" maximum horizontal distance apart in staggered array.

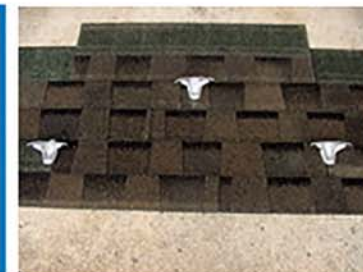

Asphalt Shingle Roofs: Use stainless steel screws. Notch at end of shingle. Maximum horizontal distance apart is 36 inches.

SnowGuardWarehouse.com - Ph: 814-786-9085

Order securely online or send us an email: Mail@JosephJenkins.com